



**HULA 11**  
INFLATABLE SUP



## **Paddle Adjustment Instructions**

1. Grasp the paddle shaft and place both thumbs on each side of the locking pin.
2. Use both thumbs on each side to push out the locking pin.
3. Adjust the paddle shaft to desired length.
4. Push locking pin back into place.